

# DIY Outdoor Privacy Screens

Dimensions: 84"W x 101 1/2"H

## Shopping List:

- 3 – 4 x 4 x 96" Pressure Treated Boards
- 2 – 2 x 4 x 96" Pressure Treated Boards
- 24 – 5 1/2"W Cedar Fence Pickets
- 12 – Simpson Strong-Tie FB24Z Fence Brackets
- 1 – Box #9 1 1/2" Strong-Drive SD Connector Screws



## Cut List:

- 3 – Posts: 3 1/2" x 3 1/2" x 96"
- 6 – Cross Supports: 1 1/2" x 3 1/2" x 30"
- 24 – Slats Cut to Fit at 22.5 degrees

## Tool List:

- Miter Saw
- Jig Saw
- Drill
- 18ga Stapler\* with 1 1/4" nails

**Tips/Notes:** I recommend using an exterior rated wood glue for additional strength when attaching the slats. I used 3/4" plywood spacers between the slats.

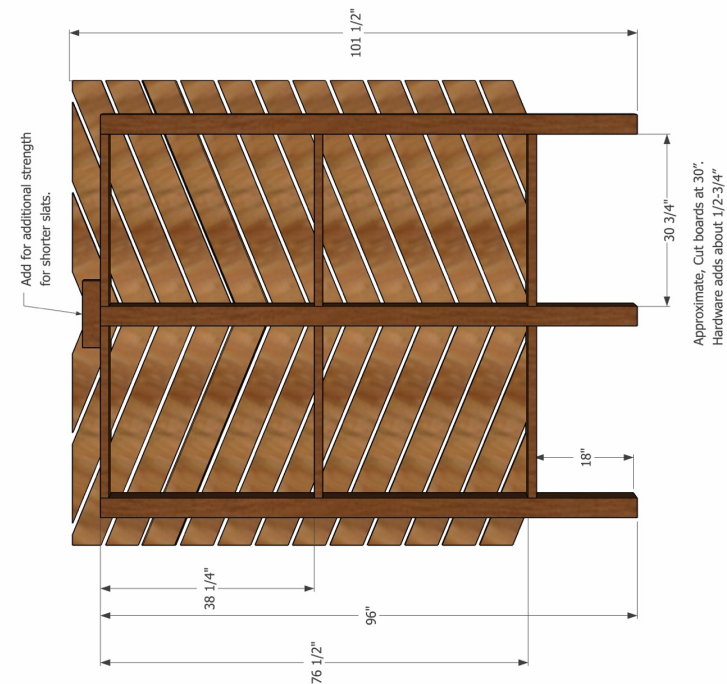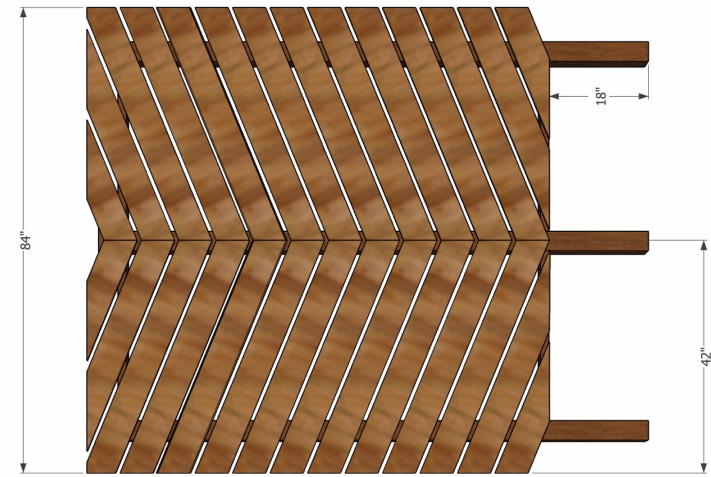

theAwesomeOrange.com

DIY Outdoor Privacy Screen

The Awesome Orange, LLC and its affiliates are not responsible from any damages that may come to persons or properties involved during the creation or use of the project or plans. The use of these plans and construction of this project is acknowledgement that you as a fabricator assume all liability for proper construction and safe use of the project through all stages.

**THE awesome orange**  
Build Loud, Build Wild